

**Drain Installation Guide**

For Stone Sinks without overflow Above Counter

**Step 1**


Position countertop drain opening to ensure clearance between the lavatory, faucet & backsplash

Cut 1-3/4" hole for drain in countertop

See Figure 1.

1

Figure 1.

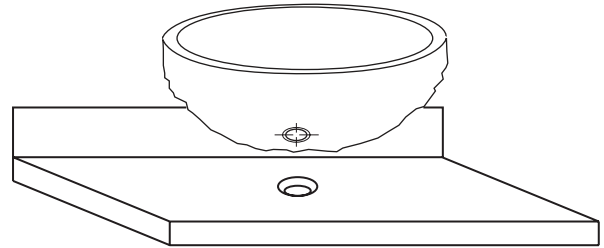

**Step 2**

See Figure 2.


Place a generous portion of plumbers' putty under drain cap and insert whole drain body inside the bowl and through the countertop.

\*There may be a small beveled rubber washer packaged with your drain, please discard this and use plumbers' putty instead.

2

Figure 2.

DRAIN Model: D8002

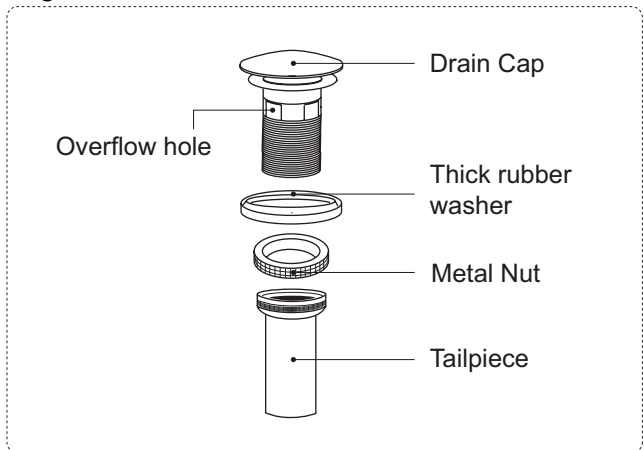


**Step 3**

See Figure 3

From under the drain, insert the thick rubber washer and screw on and tighten the metal nut. Remove excess plumbers' putty.

3

Figure 3.

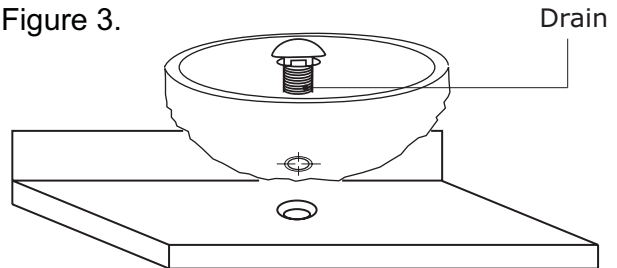

**Step 4**

Attach p-trap to tailpiece.

4

